



Vacation Mode

SKU 3606

No passport required! *Vacation Mode* is always ready when it's time to get away from it all. This adorable red bullet features a colorful summer-inspired design. The sleek angled tip delivers targeted stimulation to your favorite erogenous zones, while the robust motor offers 10 buzzworthy vibration functions to help you discover your perfect getaway. Don't let its petite size fool you—*Vacation Mode* packs plenty of excitement into a compact, travel-friendly design. Small enough to slip into an overnight bag, beach tote or purse and discreet enough for your carry-on luggage, *Vacation Mode* will come with you on adventures near and far. Splashproof and whisper-quiet, it's the perfect companion for camping trips, hiking excursions, weekend getaways or even a relaxing staycation.

Features:

- Sturdy shaft with angled tip
- Rechargeable - Magnetic USB cable included
- 3 vibration speeds
- 7 pulsation patterns
- Body-safe ABS
- Silicone Power Button
- Latex and Phthalate free
- Splashproof (IPX4)
- Length: 3.75"
- Width: .75"

*Splashproof (IPX4):

(IPX4) - Not submersible. Designed to withstand splashes and moisture from any direction. Ideal for shower-adjacent use and easy cleaning.



Cleaning

Always clean product before and after every use. For best results we recommend using Athena's (anti-microbial) Mighty Tidy Toy Cleaner SKU MTT-2762. Do not use abrasive cleaners on toy.

Lubrication

Be sure to use ample lubrication with your bedroom toys. For best results try Athena's Perfectly Pure Intimate Moisturizer (SKU 5701). You can find additional lubrication options on our web site or in our online catalog.

To ensure that you always enjoy a pleasurable experience with your adult novelty items, follow the care instructions listed below:

Do not store products near extreme cold or heat. Store in a cool, dry location. Store products separately as different materials may react with each other. Take caution when placing lotion and massage oil bottles or adult novelties directly on furniture surfaces. Place them on a cloth to protect your toys and your furniture.

Caution: For adult use as a non-medical pleasure device only. Discontinue use in the event of any medical condition or pain.

Warranty

All sales are final due to the intimate nature of our products. *Vacation Mode* is guaranteed for a replacement for 1 year for the exact same item.

For Warranty Information and Motorized Pleasure Device Best Practices please scan here.



©June 2026
Athena's Home Novelties, Inc.
www.athenashn.com
1-877-ATHENAS


Charging

Connect the USB plug into a power source and align the other end of the charging cord with the toy's 2 magnetic charging pins, located at the base of the toy. Light flashes in the power button while charging and will glow steady when fully charged. It's recommended not to overcharge for prolonged periods of time. Remove cord prior to operating. Battery life depends on frequency and speed of use.

We recommend fully charging your product once every 2 months. Only use the cord supplied with this product or an Athena's authorized replacement cord.

Charge Time: 90 minutes

Run Time: 120 minutes

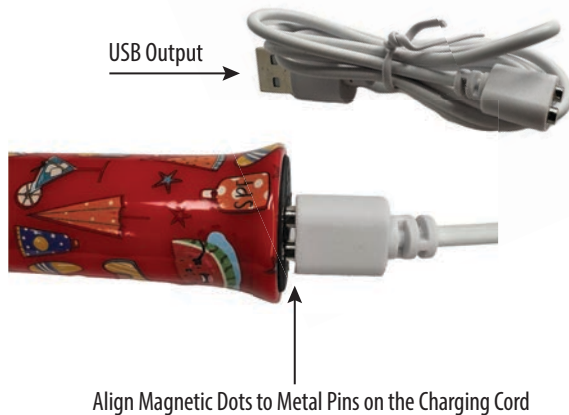

Operating

ON: Press and hold the power button for 3 seconds. The toy will buzz briefly and the light on the power button will glow. The toy is now in stand by mode.

Vibrations: Tap to the power button to cycle through the 10 vibration modes.

OFF: Press and hold the power button for 3 seconds. The light will not glow and vibrations will cease.

